


363060

Gas Powered FireHose Tester

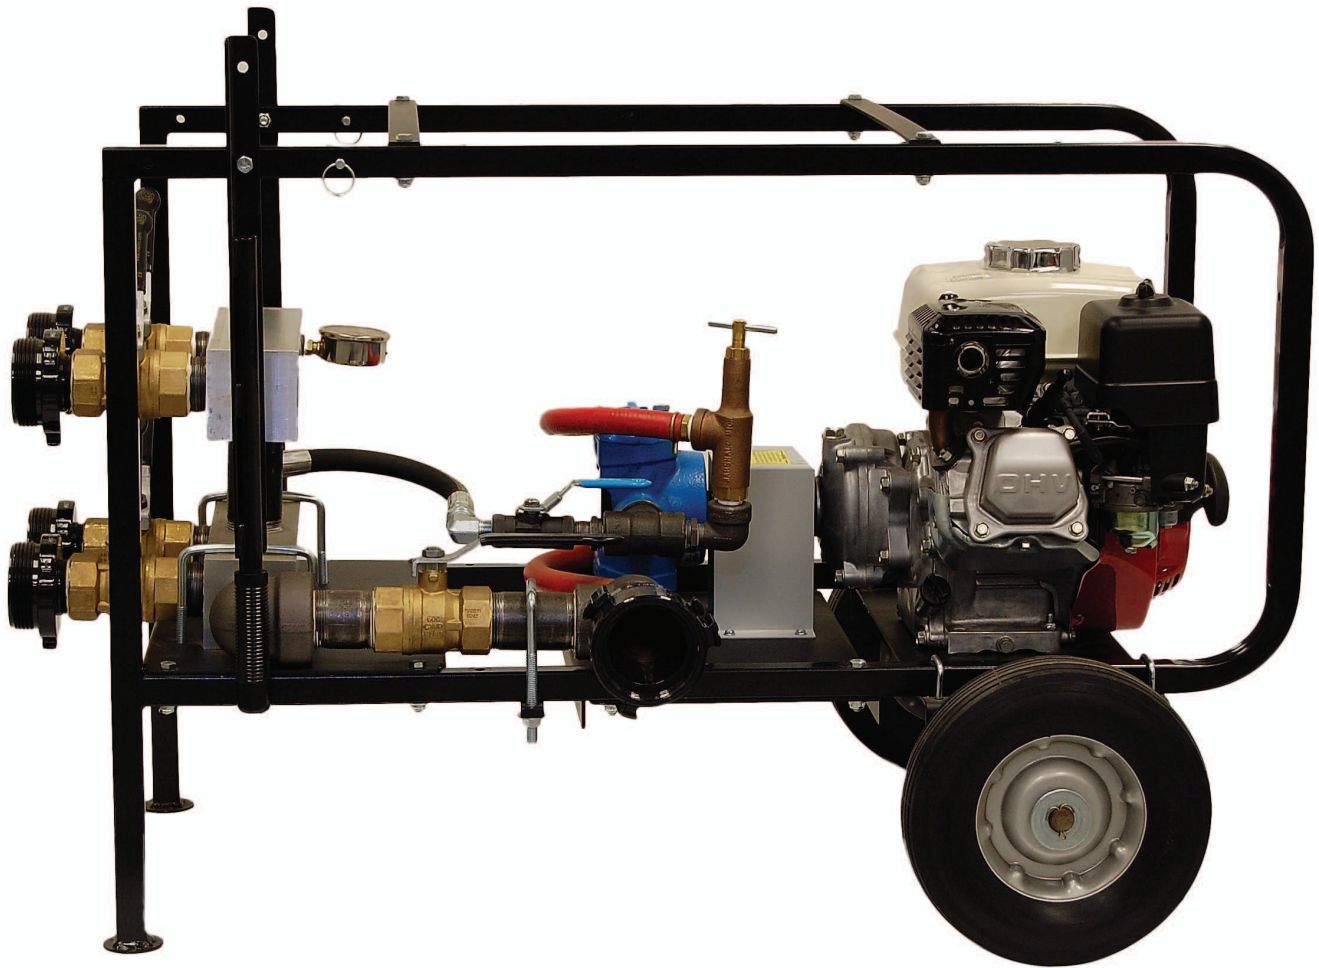


Wheeler-Rex • Ashtabula, Ohio
Tel: 800-321-7950 or 440-998-2788 • Fax: 440-992-2925
wheeler@wheelerrex.com
www.wheelerrex.com

072014

Before Operating:


1

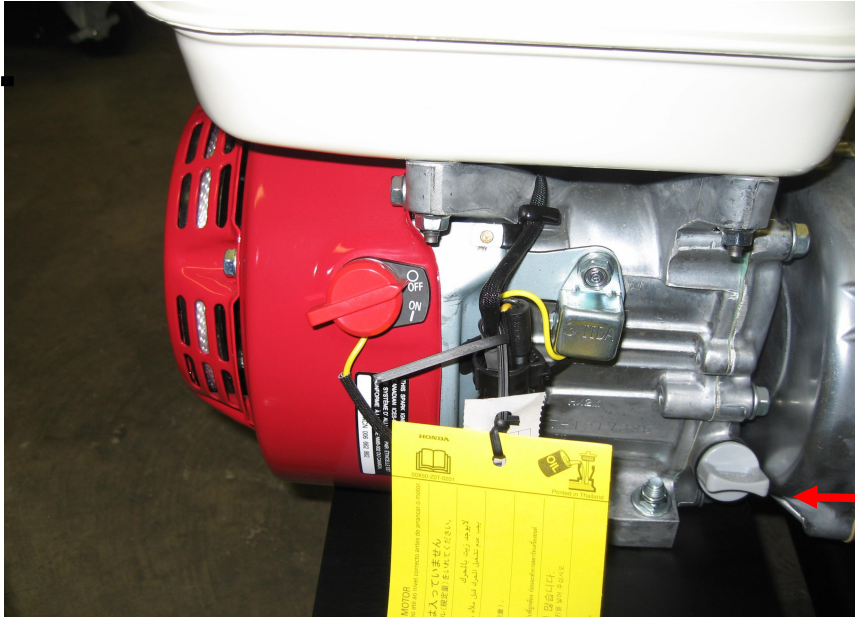

Oil

- A) Check oil level each time before running the engine. (The unit is sold without oil in the crankcase.)
- B) Please refer to engine manual for operation and maintenance.

2

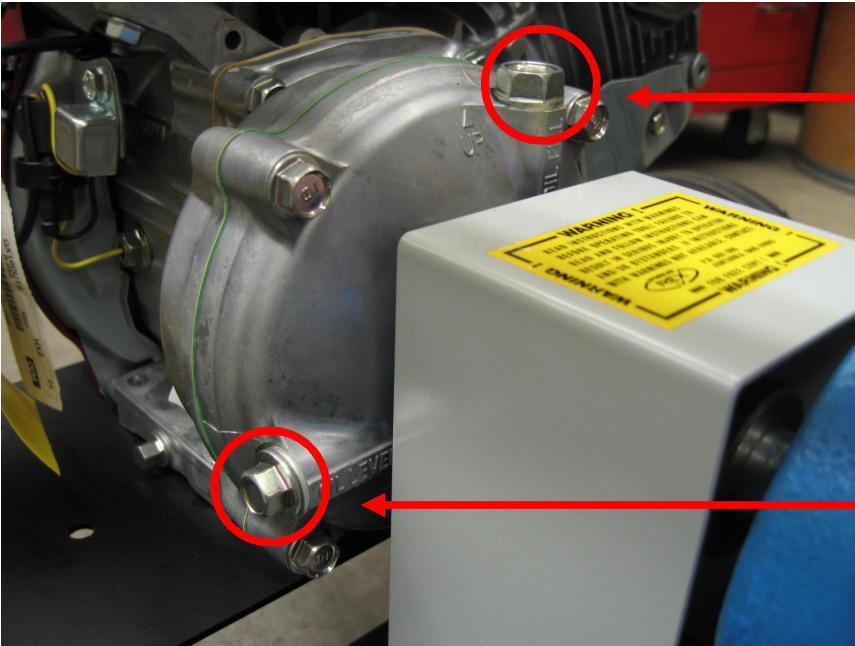


Oil Fill
Screw

Oil Level
Screw

- A) Check gear box oil level each time before running the engine. (The unit is sold without oil in crankcase.)
- B) Please refer to engine manual for operation and maintenance.

Getting ready to test.

1.

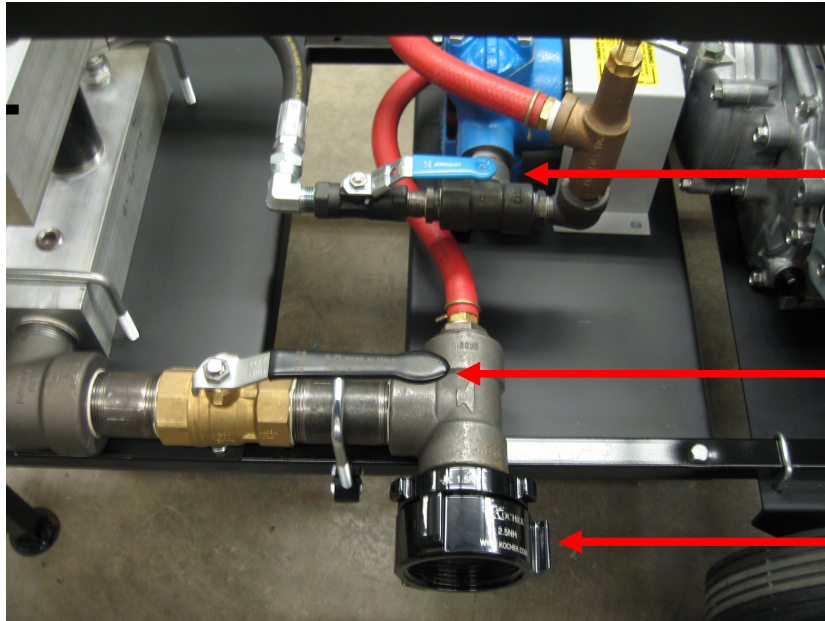


Isolation Valve

Inlet Valve

Inlet

- A) Attach hose to inlet “swivel” connection. Use a spanner wrench to properly tighten the hose connection. Pump is supplied with a large 2-1/2” NST female swivel connection to be connected to either a fire hydrant or fire truck.
- B) Open both inlet valve and isolation valve.
- C) Open water supply to the test pump.

2.

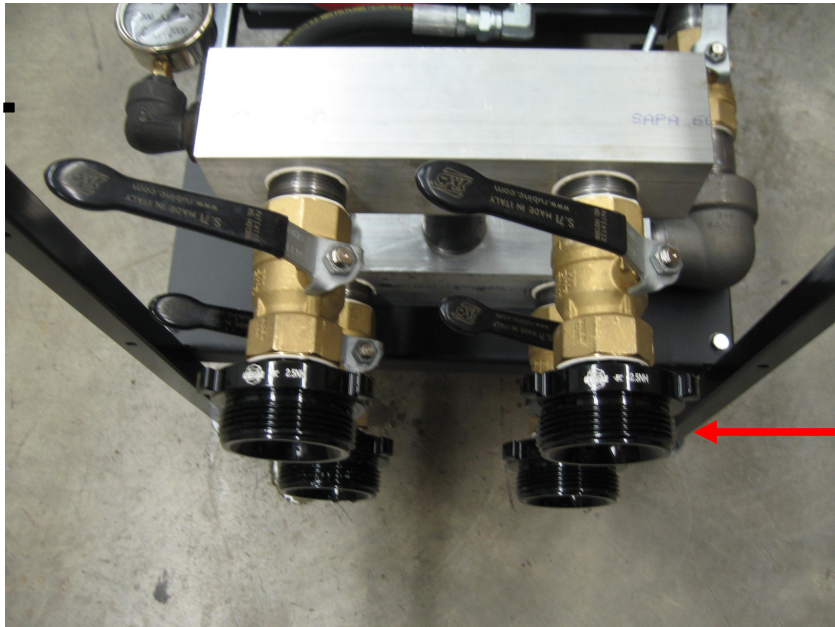


Outlet Connection

- A) Connect hoses to be tested to the manifold assembly. Hoses should have a test cap or fire nozzle attached on the opposite end.
- B) Open all valves on manifold. If you are testing two hoses, close the two valves you are not using. Always use the bottom two outlets first.
- C) Open valve from water supply tank. Allow water to flow to the pump and fill the hoses to be tested.

Testing the hoses:

1.

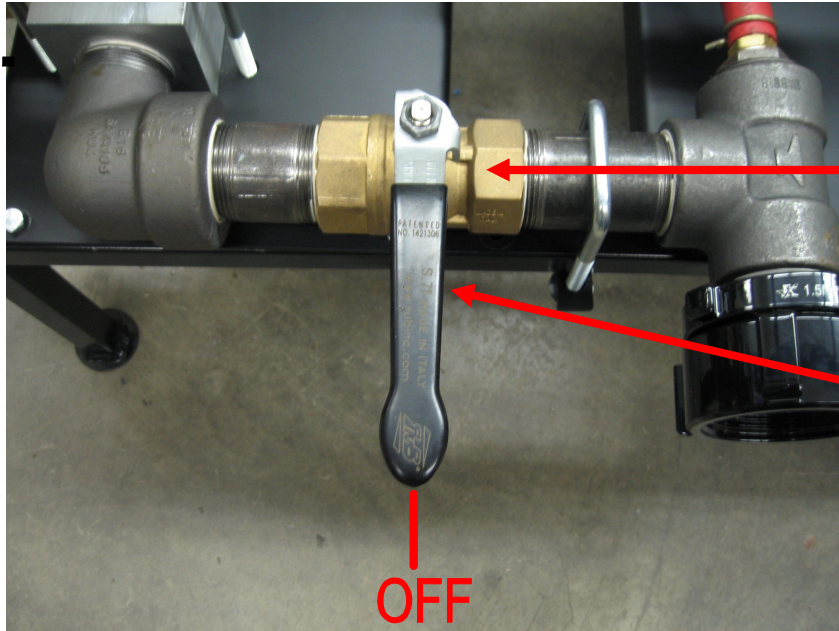


Once the “test” hoses are full, shut the inlet valve. You will need to bleed out any air that is trapped in the hoses or manifold.

2.




Turn gas to “ON” position (if applicable)
Turn Choke to “ON” position (if applicable)

3.

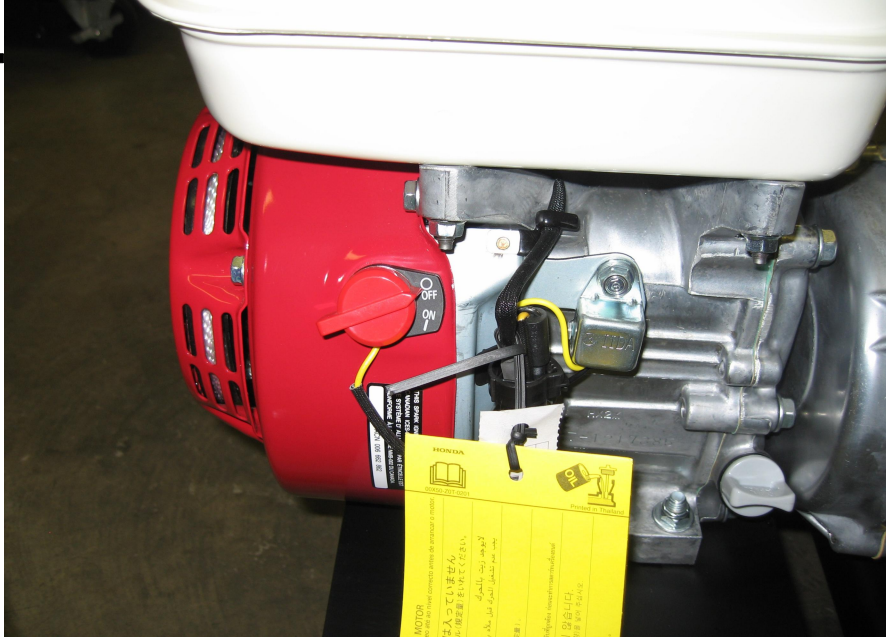

- A) Turn engine to the “ON” position (if applicable).
- B) Start engine.


4.

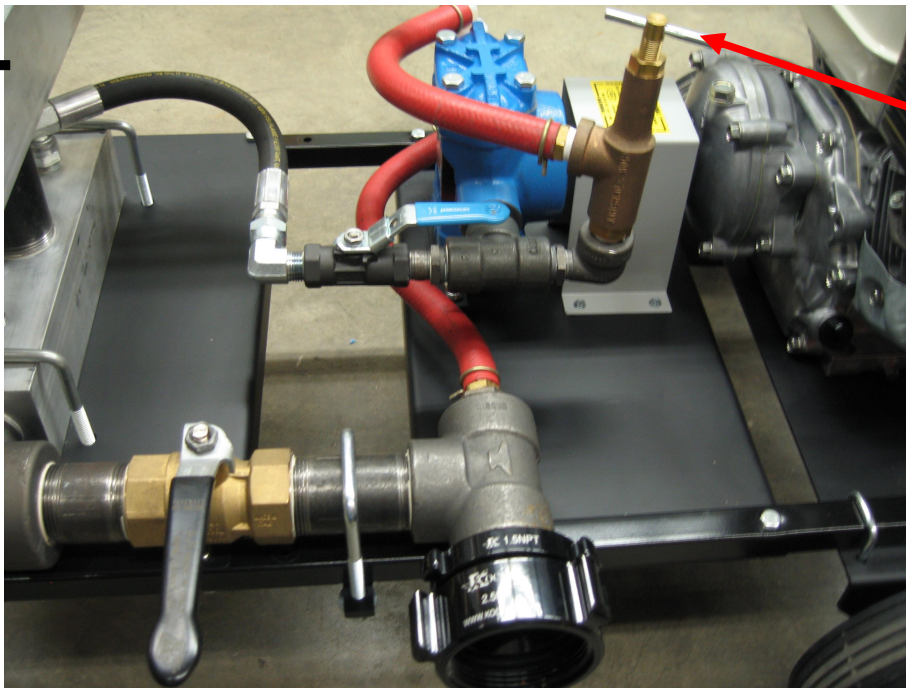

Relief Valve
(factory preset to 400psi)

- A) Adjust the relief valve to the pressure required by NFPA guidelines.
- B) Again, it may be necessary to bleed out any air that may be trapped in the hoses or manifold assembly.


5.

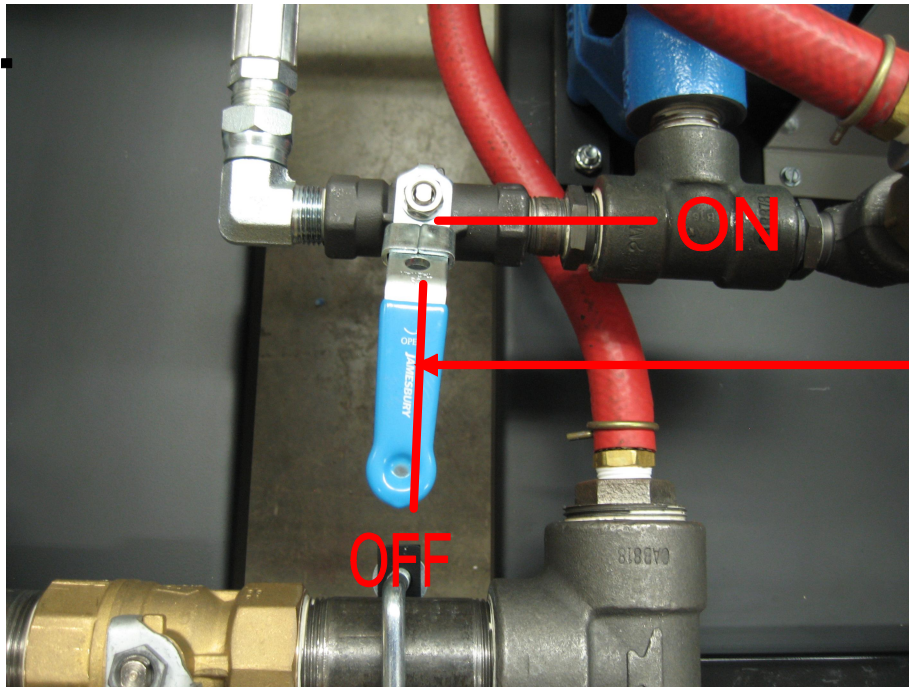

Isolation Valve





When the rest pressure is reached, turn the isolation valve to the "OFF" position and turn off the engine.

6.

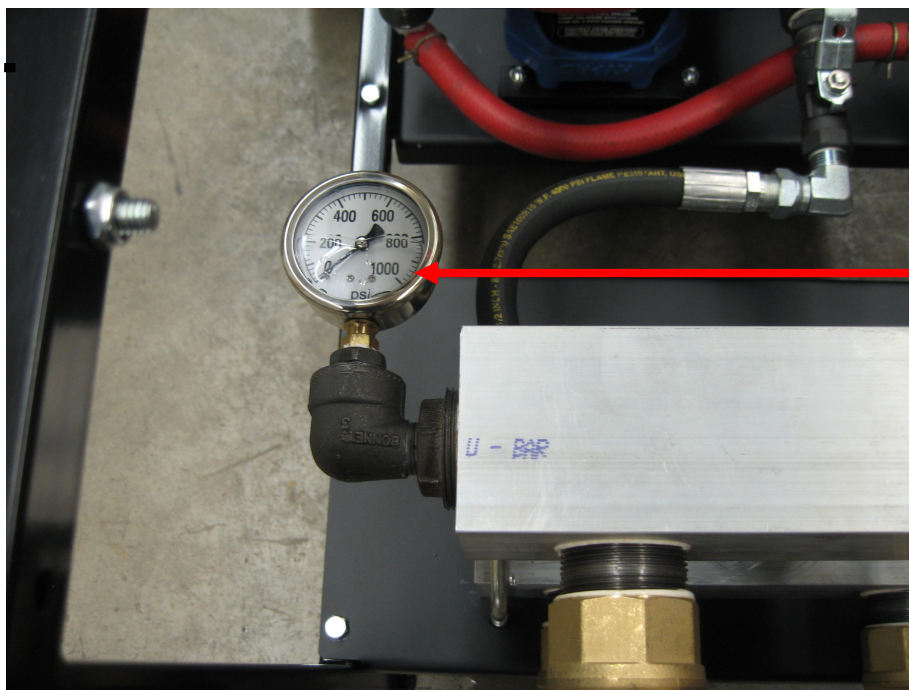

Gauge


Watch the gauge for pressure drop over time to determine if Hoses are in working order.

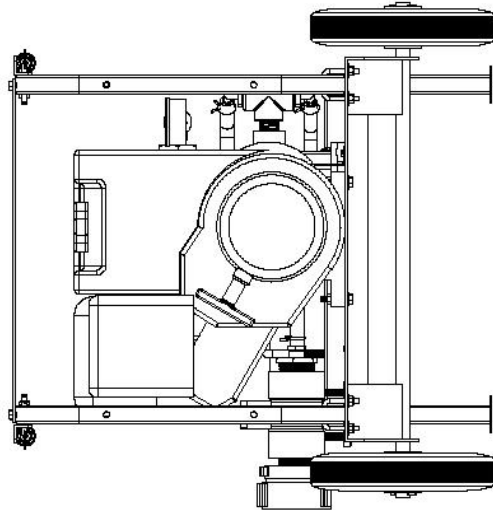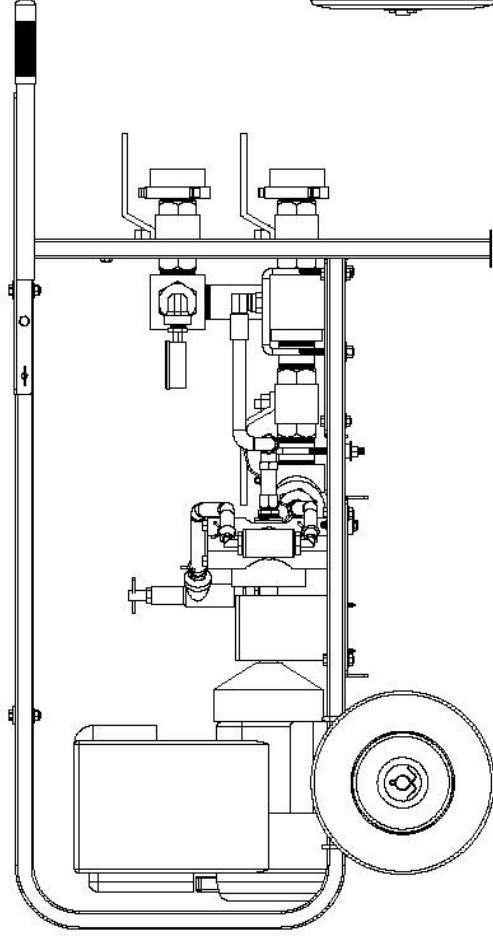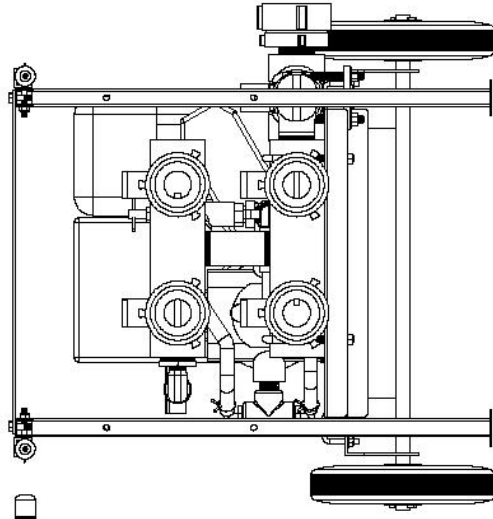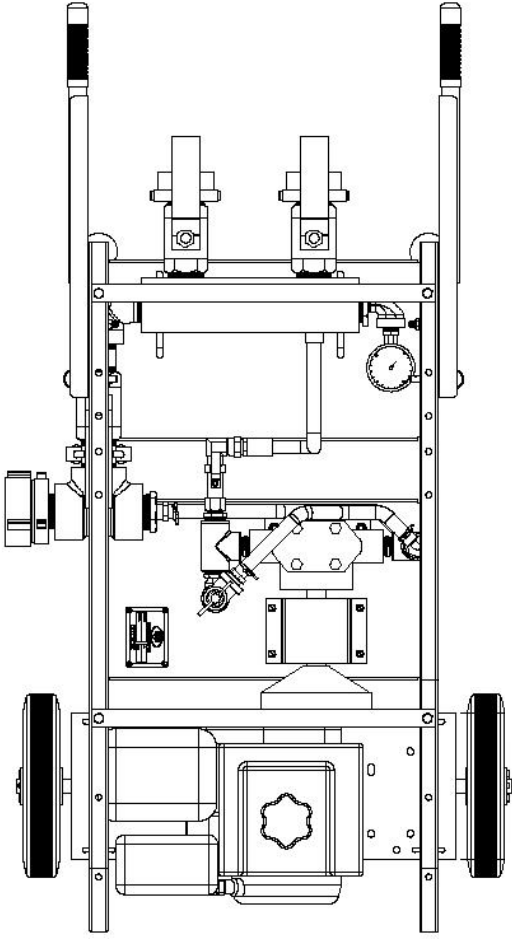

3744 Jefferson Rd., Ashabula, OH 44005
DESCRIPTION:
10 GPM/100 PSI HONDA FIRE HOSE T.P.
PART NO. 363060



3744 Jefferson Rd., Ashland, OH 44005
DESCRIPTION:
10 GPM/400 PSI HONDA FIRE HOSE T.P.
PART NO. 363060

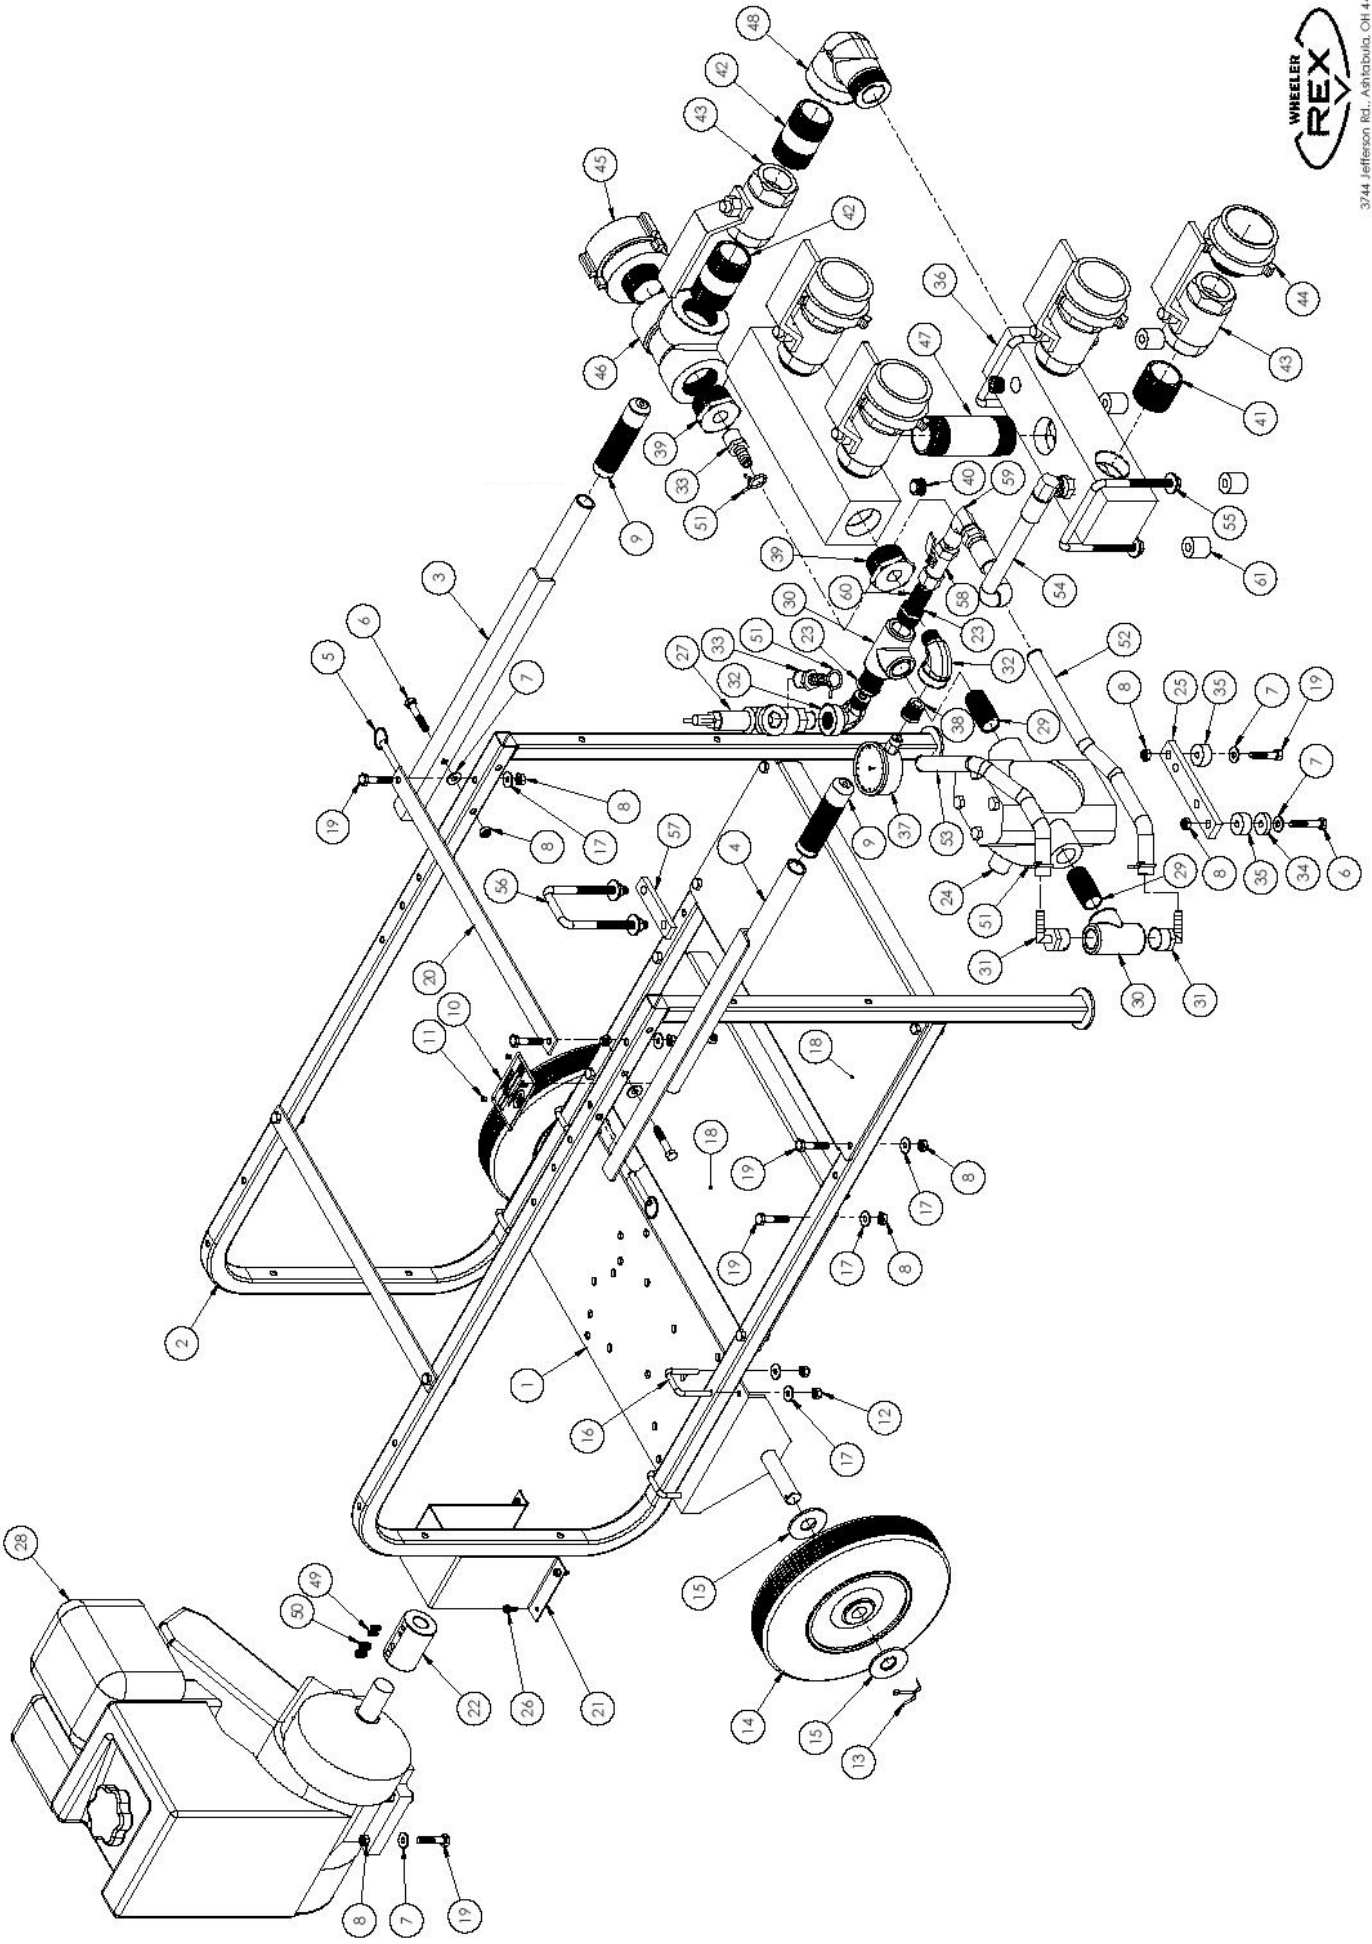

Item	PN	Description	Qty
1	700943	AXLE ASSEMBLY	1
2	700387	CART SIDE	2
3	700858	RIGHT HANDLE ASSEMBLY	1
4	700859	LEFT HANDLE ASSEMBLY	1
5	276752	COTTERLESS PIN w/ RING	2
6	275639	5/16-18 x 1 3/4" HHCS	3
7	275685	5/16" FLAT WASHER	8
8	275857	5/16-18 HEX NYLON-INSERT LOCKNUTS	21
9	154	GRIP	2
10	220874	NAME PLATE	1
11	275543	POP RIVET, STAR 4-2AAD	4
12	275426	1/4-20 ESNA STOP NUT	8
13	276330	1/8 x 2 5/16 COTTER PIN	2
14	276441	THREADER CART WHEEL	2
15	276129	3/4" WASHER	4
16	700406	U-BOLT	4
17	276540	1/4" FLAT WASHER	20
18	700385	END PLATE	2
19	275638	5/16 x 1 1/2" HEX HEAD CAP SCREW	17
20	700959	TOP SUPPORT	2
21	221306	COUPLING GUARD	1
22	700120	PISTON PUMP COLLAR	1
23	275647	3/4" NPT x 1/2" NPT BUSHING	2
24	275808	PISTON PUMP	1
25	700119	PISTON PUMP BASE	1
26	275427	#10-24 x 5/8" SLTD HX WSHR HD, TYPE F	4
27	276341	RELIEF VALVE	1
28	276095	5.5 HONDA ENGINE	1
29	275646	3/4" CLOSE NIPPLE	2
30	275644	3/4" TEE	2
31	276184	3/4 NPTx 1/2 90 DEG HOSE BARB	2

Item	PN	Description	Qty
32	275666	1/2" FS SCRD STREET ELL	2
33	275496	1/2" HOSE BARB	2
34	700127	URETHANE WASHER	1
35	700126	SHOCK	2
36	701174	MANIFOLD	2
37	275788	GAGE 0-1000 PSI	1
38	275670	1/2 x 1/4 FS SCRD HX BUSH	1
39	276609	1 1/2" x 1/2" REDUCER BUSHING	2
40	275368	HEX SOCKET 1/2" NPT PIPE PLUG	3
41	276612	1 1/2" x CLOSE PIPE NIPPLE	4
42	276613	1 1/2" x 3" PIPE NIPPLE	2
43	276595	1 1/2" BRZ BALL VALVE	5
44	277051	NPT TO NST HOSE ADAPTER	4
45	277052	NPT TO NST HOSE ADAPTER	1
46	276611	1 1/2" FS TEE	1
47	277054	1 1/2" x 5" XH PIPE NIPPLE	1
48	276614	1 1/2" FS BLK STREET ELL	1
49	276118	1/4-20 x 1/2" FULL DOG SET SCREW	2
50	276119	3/8-16 x 1/2" FULL DOG SET SCREW	2
51	276185	HOSE CLAMP	4
52	701376	SUPPLY HOSE	1
53	701377	BY-PASS HOSE	1
54	700326	HIGH PRESSURE HOSE	1
55	277057	SQUARE BEND U-BOLT	2
56	277192	SQUARE BEND U-BOLT	1
57	701378	U-BOLT BOTTOM	1
58	275675	1/2" VALVE	1
59	276313	HYD 90 ELL 1/2 NPT x 1/2	1
60	275669	1/2" CLOSE NIPPLE	1
61	700892	SPACER	4



WHEELER-REX LIMITED LIFETIME WARRANTY

WHEELER-REX covers its products with a Limited Lifetime Warranty, with exception of pipe threading machines which have a Limited Three Year Warranty (including electric motors). Warranties from manufacturers of components used in our products may pre-empt the Wheeler-Rex warranty. Wheeler-Rex warranties against defects in material or workmanship. To take advantage of this warranty, the complete product must be delivered prepaid to Wheeler-Rex or any WHEELER-REX AUTHORIZED SERVICE CENTER. No tools are to be returned to the factory without receiving prior authorization. Obviously, failures due to misuse, abuse, or normal wear and tear are not covered by this warranty. **NO OTHER WARRANTY, WRITTEN, OR ORAL, APPLIES. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.** No employee, agent, dealer, or other person is authorized to give any warranty on behalf of Wheeler-Rex. Warranted products will be repaired or replaced at our option, at no charge and returned to you via prepaid transportation. Such replacement or repair is the exclusive remedy available from Wheeler-Rex. Wheeler-Rex is not liable for damage of any sort, including incidental and consequential damages. Some U.S.A. states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Form # 1031

WARNING

GENERAL TOOL OPERATION WARNINGS

FOR ALL TOOLS-

1. **Keep Guards in Place** and in working order.
2. **Remove Adjusting Keys and Wrenches** from tool before turning it on.
3. **Keep Work Area Clean.** Cluttered areas and benches invite accidents.
4. **Avoid Dangerous Environment.** Don't use power tools in damp or wet locations. Keep work area well lit. Don't expose power tools to rain.
5. **If you must use an electric tool in a damp or wet location,** make sure it is plugged into a circuit which is protected by a ground fault interrupt.
6. **Keep Children Away. ALL VISITORS SHOULD BE KEPT A SAFE DISTANCE FROM WORK AREA.**
7. **Store Idle Tools** in dry, high, or locked-up place out of reach of children.
8. **Don't Force Tool.** It will do a better and safer job at the rate for which it is designed.
9. **Use Right Tool.** Don't force a small tool or attachment to do the job of a heavy-duty tool.
10. **Wear Proper Apparel.** No loose clothing or jewelry to get caught in moving parts. Rubber gloves and footwear are recommended when working outdoors.
11. **Use Safety Glasses.**
12. **Don't Abuse Cord.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
13. **Secure Work.** Use clamps or vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.
14. **Don't Overreach.** Keep proper footing and balance at all times.
15. **Maintain Tools Properly.** Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories. Equipment operators must have proper maintenance & instruction sheets. Be sure the tool operator reads and understands this information. If you don't have current maintenance and instruction sheets, contact the factory & we will supply them at no charge.
16. **Disconnect Tools** when not in use, before servicing; when changing accessories such as dies, cutters, etc.
17. **Avoid Accidental Startling.** Don't carry plugged-in tool with finger on switch. Be sure switch is off when plugging in.
18. **Outdoor Use Extension Cords.** When tool is used outdoors, use only extension cords suitable for use outdoors and so marked.
19. **Wear Ear Protection** if exposed to long periods of very noisy shop operations.
20. **Do not operate tools** while under the influence of alcohol, drugs or medication.

